







## How to collect Upgrade SPKG/CABS of W10M Builds



### Requirements

- ❖ Interop Unlocked Windows 10 Mobile Device.

#### Interop Unlock Guides

How to Interop unlock Non-X50 Lumia :	 W10M Group	 Mega.nz
How to Interop unlock X50 Lumia :	 W10M Group	 Mega.nz
How to Interop unlock Other OEM :	 W10M Group	 Mega.nz

Windows 10 Mobile (Lumia) Group :- <https://t.me/Windows10Phone>





## Preparations

> Download the shortcut Ink file to "U:\SharedData\DUShared"



Move it to the "Downloads" Folder of your Phone and rename the file from "DUShared.Ink.rename" to "DUShared.Ink"

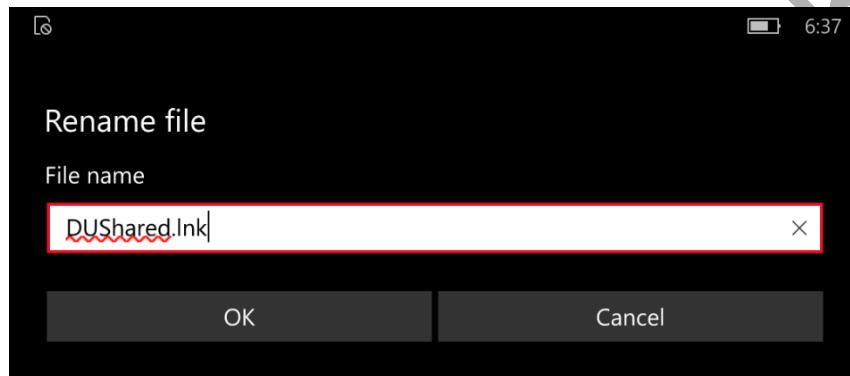


(After renaming the file icon will be changed to )

> Download the "C" & "U" (MainOS & Data) partition access via File explorer reg



Import it using Interop Tools.

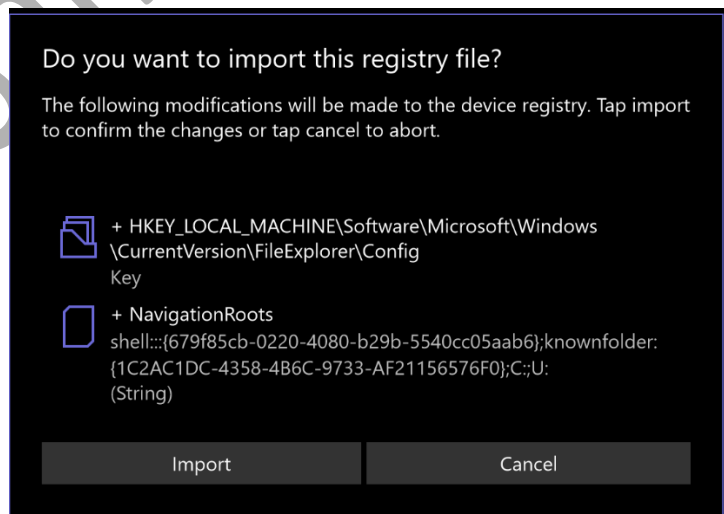

### NOTICE

If your phone is running Anniversary update (1607 – 10.0.1493) Build or lower build, then DO NOT use the above Registry file.


You can use the DUShared.ink file without importing the above REG.




## Steps

---


> After importing the reg file, your File explorer in mobile hamburger bar should contain two new directories (*NOT NEEDED FOR 1607 & LOWER BUILD, SEE PREPARATIONS*)

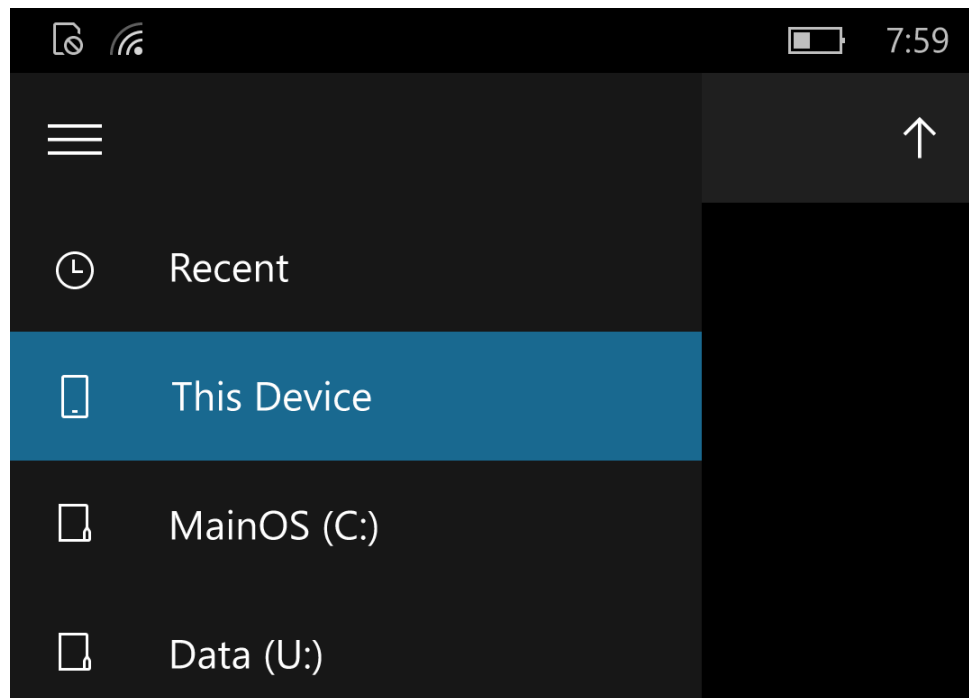

> Then click on the “DUShared.ink” shortcut you placed in “Downloads” folder and it will get you to the location where the Windows Update stores the Update cabs temporarily before installing.

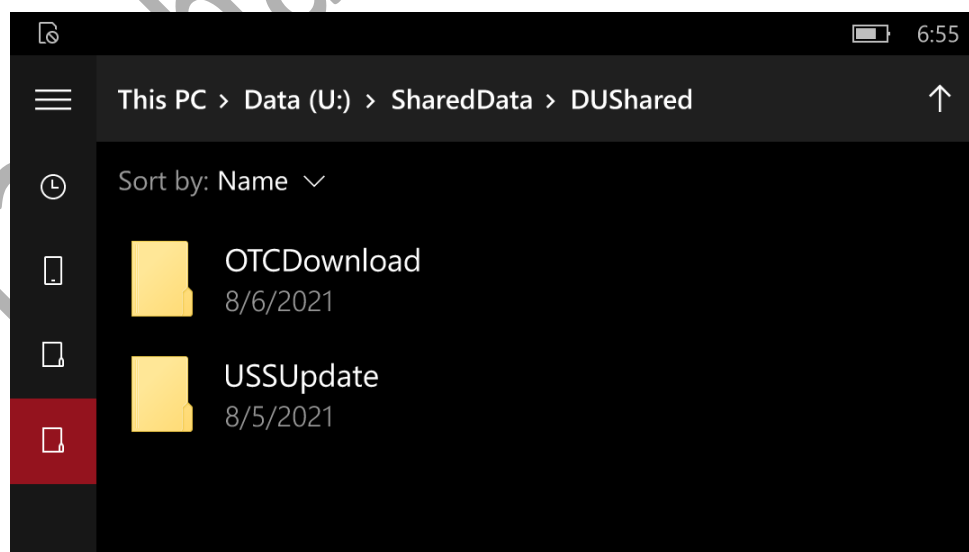

> Now, start an update in “Settings → Update & Security → Windows/Phone Update”

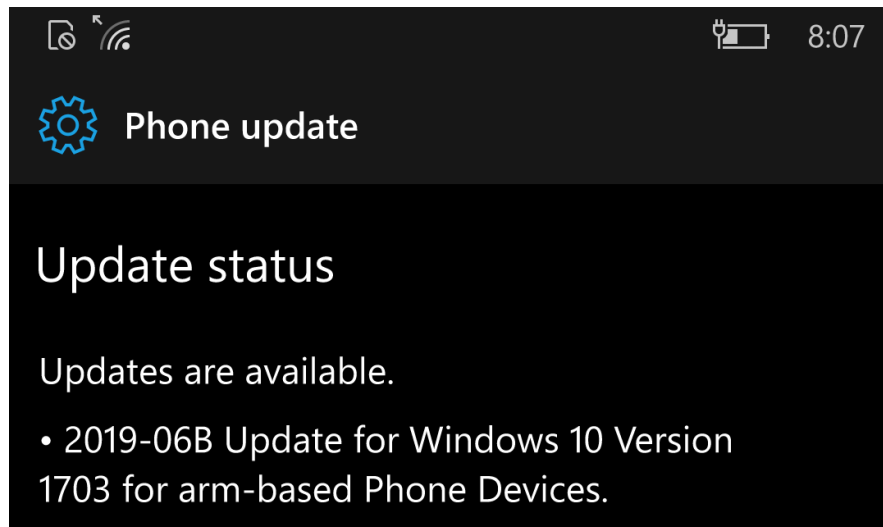

“Sample Pic : 10.0.15063.1868 update”

> Let the download go to 100%, **now you need to act QUICK !**



> As soon as “Preparing to Install Updates 0%” shows after “Downloading Updates” is finished.

A screenshot showing a progress bar at 0% with the text "Preparing to install updates 0%".

Preparing to install updates 0%

> Go back to the File explorer of the phone where you have opened the “DUShared.ink” file.


A new Folder called “PackagesToInstall” should appear.

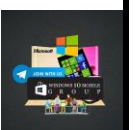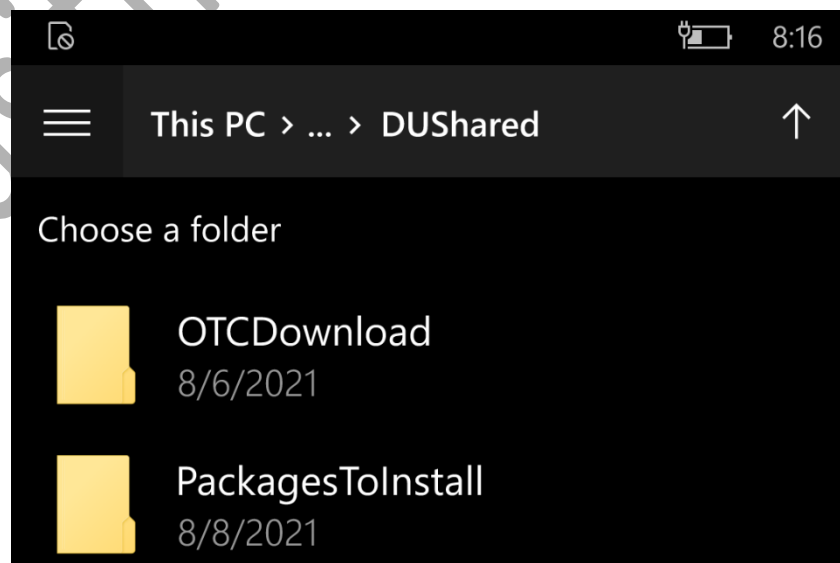

> Long press on it and choose “Copy”, then choose the same directory for “Where to copy” too.


You can copy the file to anywhere in your phone.

Why I said to copy it to the same folder is that it reduce the copying time

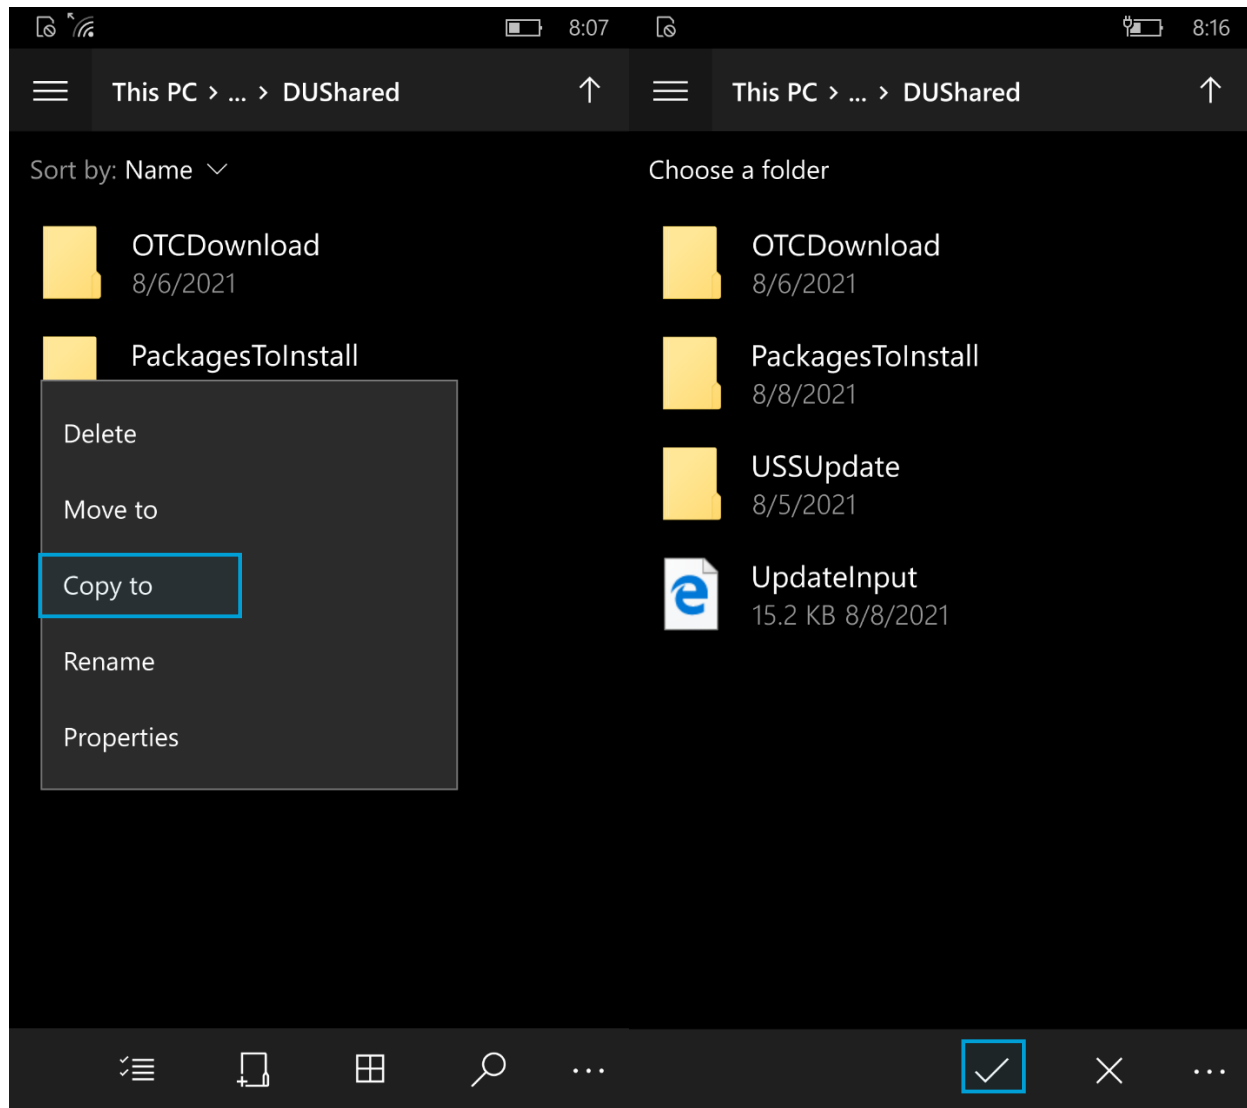


### Notice


If you don't hurry after the “Preparing to Install Updates 0%” is showed, some update cabinets will be gone from the “PackagesToInstall” Folder when the percentage increases.

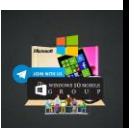

> After copying to the same folder, it will be saved as a folder named “PackagesToInstall - Copy”

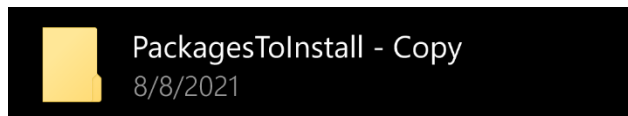

> Now select both “PackagesToInstall - Copy” folder and “UpdateInput” file, and copy them to your “Downloads” folder (Or anywhere you wish to)

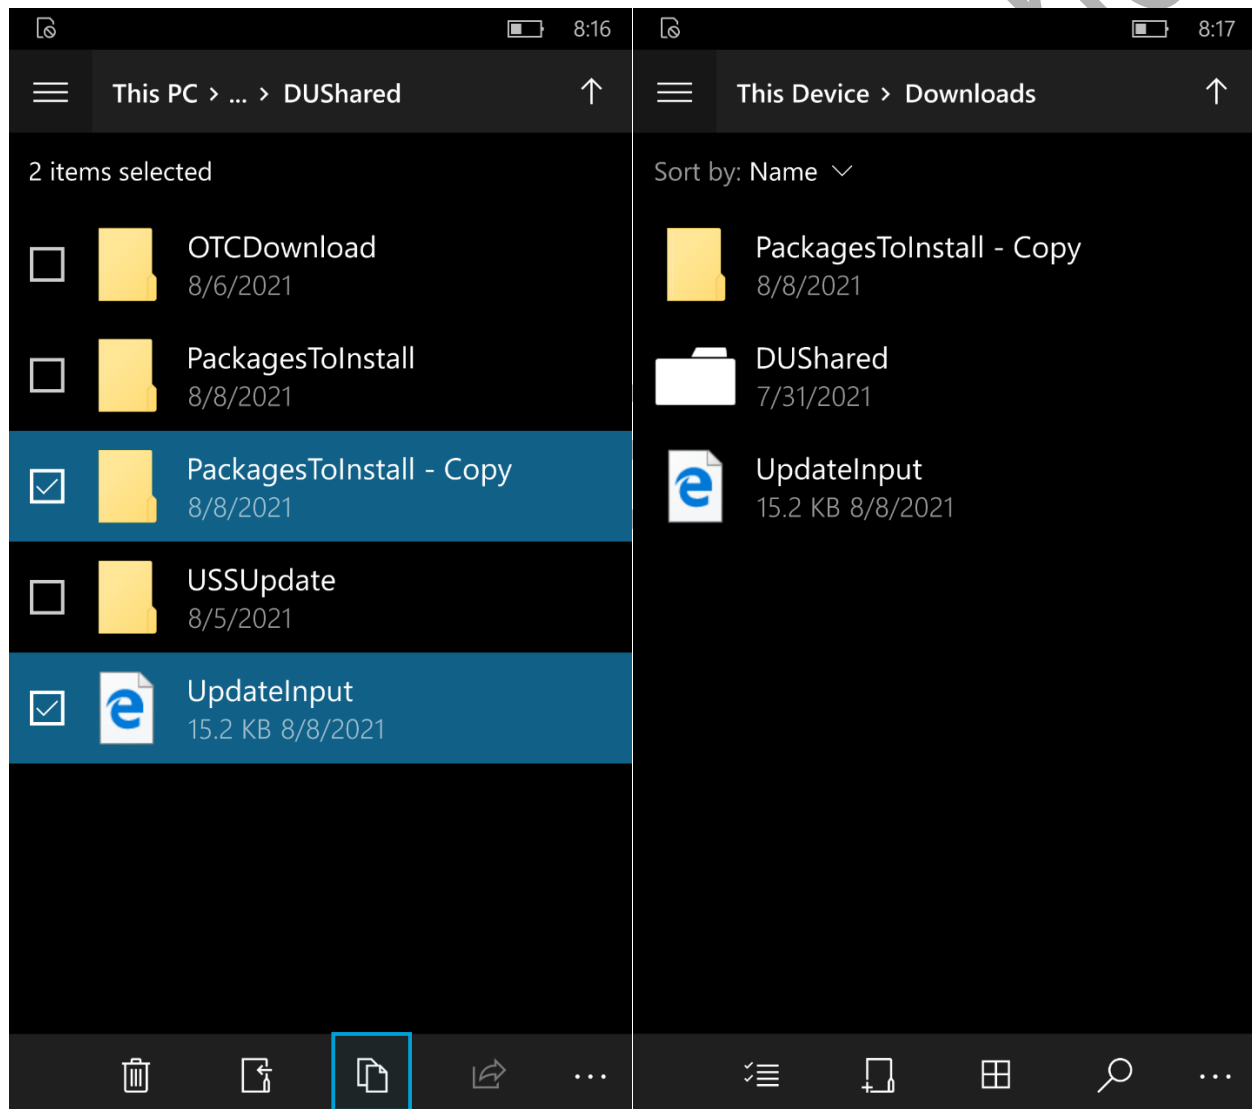

> The update should continue in “Windows Update” settings and it will reboot to install the update.



> Once your phone booted back after installing the update, go to “Settings → System → About → More info” and take a note of the “OS Build” number.

## Device information

Model: NOKIA Lumia 1520

Software: Windows 10 Mobile

Installed RAM: 2 GB

Version: 1709

OS build: 10.0.15254.603


Firmware revision number: 02540.00019.15053.26005

> Rename the “PackagesToInstall – Copy” Folder you copied to “Downloads” or anywhere in your phone to that Build Number.

> Then you may copy that Cabinet Folder of that specific update to your PC via USB.

> Repeat from [Step 2](#) and onwards to collect further Update cab files for different updates.

> Using this Guide, you can collect Update cabs for each build and store them for later use for offline Upgrade without using PC.

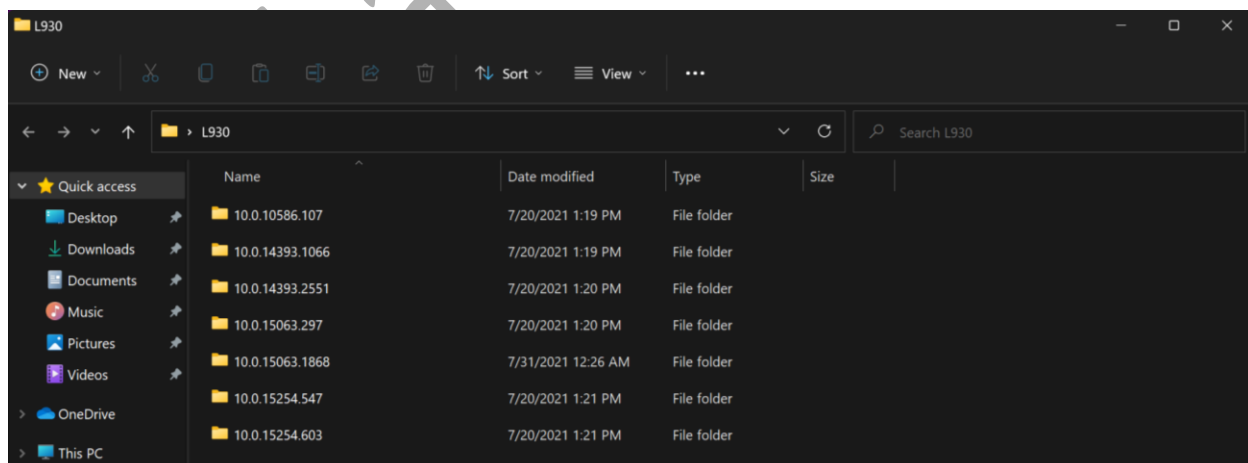

“Sample Pic : Release Builds Update cabs for L930”



## Verifying the Integrity of the Cab files after copying

---

- ❖ Open "Update Input" file you copied along with "PackagesToInstall – copy" folder and verify if all those files listed in there are also present as Cab files in the "PackagesToInstall – Copy" folder that you copied.

## Additional Notes

---

- With this method, you can collect Upgrade Cabs of every W10M Build as long as you have a W10M Build already installed in your phone.
- You can Collect Fall Creators Update (1709) Cabinet files too with this method (Which isn't possible with OTC Updater)
- If your Device is an old Lumia which didn't receive the W10M CU (1703) and FCU (1709) updates, you can import this reg in Interop tools and simply follow from [Step 2](#) and onwards


950XL identity Spoofing Registry File :



you will get every updates to your phone until the very last build which is 10.0.15254.603

### Cab Installation Guide

"How to Update W10M Build using Upgrade Cabs" :



## Credits

---

- ✓ Fadil Fadz for the method.

Thank You !



\_\_\_\_\_*Lasitha Samarasinghe*\_\_\_\_\_

